



1 ACCESS PLATE

Remove Access Plate by sliding Access Plate in the direction of Arrow 1. To remove, lift up and slide in the direction of Arrow 2. Bend Fixture Tab up out of body and make ground and ballast connections. Bend Fixture Tab back to original position. Replace Access Plate by reversing removal instructions.

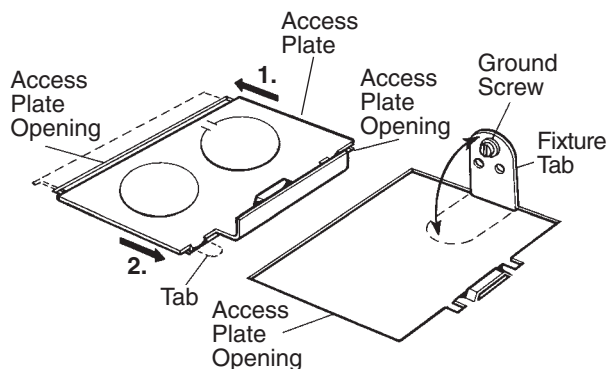


2 INSTALL FIXTURES onto T-bars as shown.

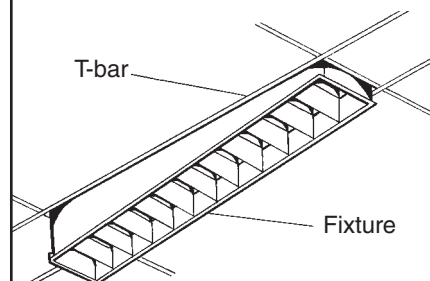


3 END TRIM

Install End Trim at beginning and end of row.

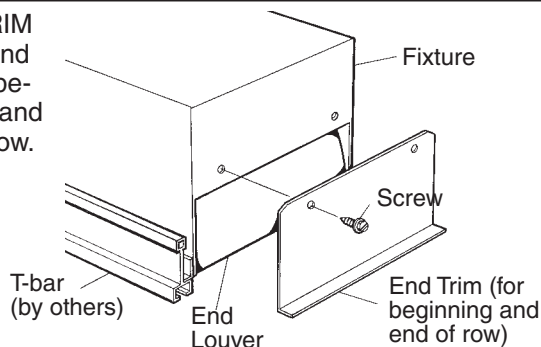




4 HOLD-DOWN CLIPS (LI UNITS ONLY) Install Hold-down Clips at beginning and end of rows.

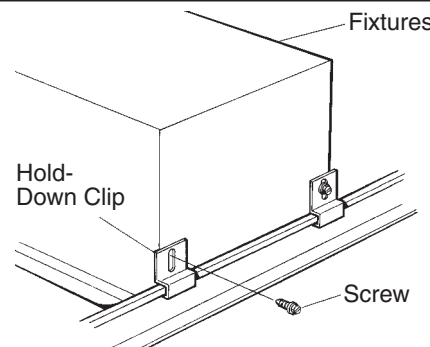


5 CONTINUOUS ROW COUPLER (LC UNITS ONLY) Remove screw as shown. Rotate Continuous Row Coupler (both sides of Fixtures) and secure Fixtures

together with Screw. Tighten all Screws to secure Fixtures to T-bar with Hold-down Clips.


Coupler is used at end or beginning of row to secure End of Row Fixture to T-bar (by others)

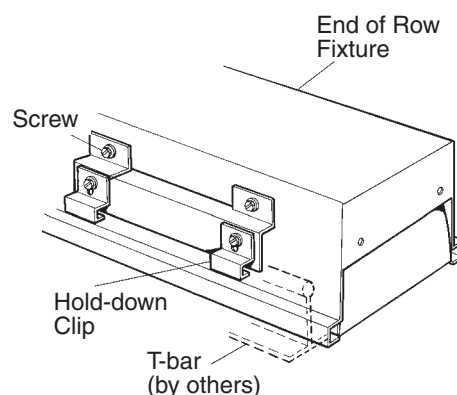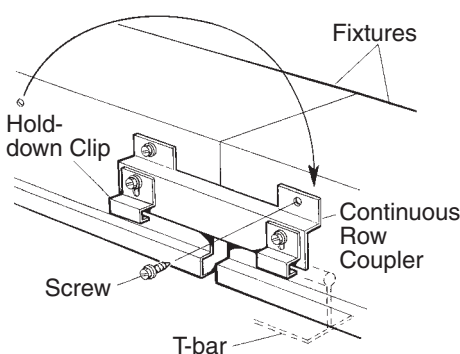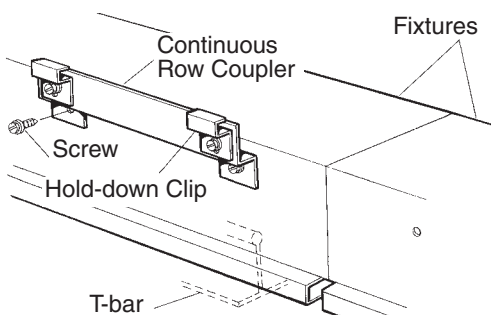


- ⑥ FOR 1 LAMP**
To open Louver, press Spring Latch in direction of Arrow. To close, insert louver into Fixture until Spring Latches automatically engage.

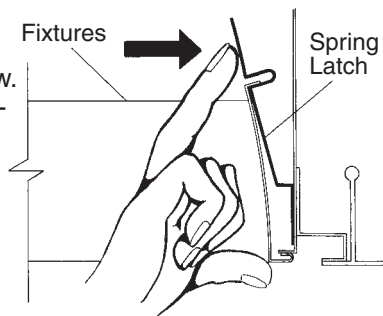

- ⑦ FOR 2 LAMP**
To open Louver, place finger or small tool thru Access Hole in Louver and press Spring Latch in direction of arrow. To close, insert louver into Fixture until Spring Latches automatically engage.

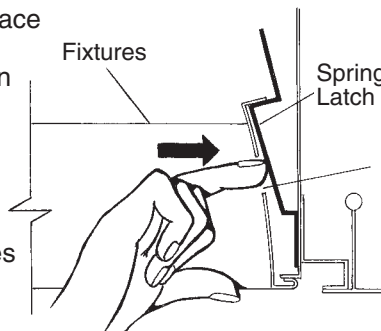

- ⑧ LENS INSTALLATION** (Individual, LI, unit only)
Follow diagrams 8a - 8c.
To remove lens reverse installation.

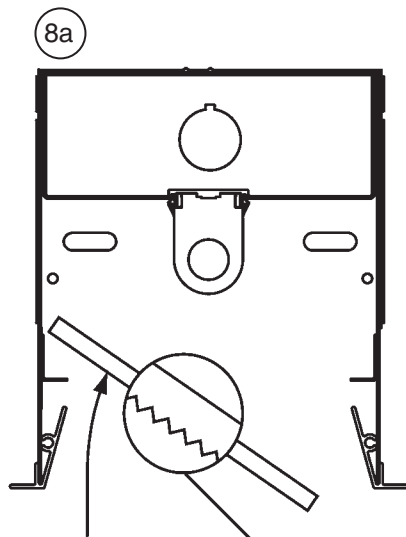

Lens with prismatic side down (Away from lamp)

